 


Setting Energy Saving Mode


The RISO Digital Duplicator is equipped with an Auto-Power OFF function as the Energy Saving Mode. In order to save energy, please set the Auto-Power OFF function in accordance with the following procedure.

RISO CV series

1 Press the [CUSTOM] key.

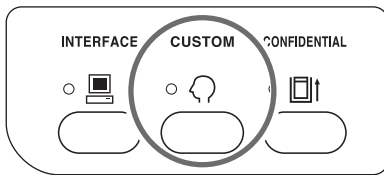

2 Enter "15" using the Numeric Keys.

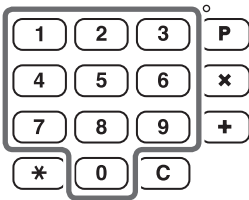

3 Press the [START] key.



4 Enter "2" using the Numeric Keys.

5 Press the [START] key.

6 Enter "16" using the Numeric Keys.

7 Press the [START] key.


8 Enter "3" using the Numeric Keys.

9 Press the [START] key.

10 Press the [CUSTOM] key.


RISO EZ3/2 series

1 Press the [CUSTOM] key.

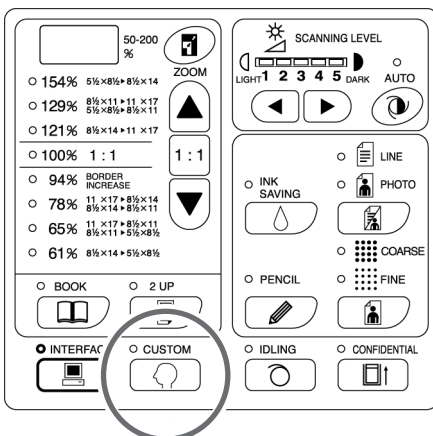

2 Enter "10" using the Print Quantity keys.

3 Press the "+" key.

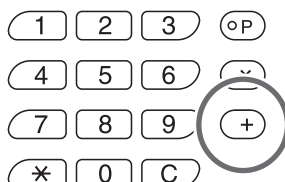

4 Enter "2" using the Print Quantity keys.

5 Press the [START] key.



6 Press the [CUSTOM] key.

7 Enter "11" using the Print Quantity keys.


8 Press the "+" key.

9 Enter "3" using the Print Quantity keys.

10 Press the [START] key.

RISO ME/MZ series, SE/RZ10 series, EZ5 series


1 Touch [Admin.] on the basic screen of any mode.

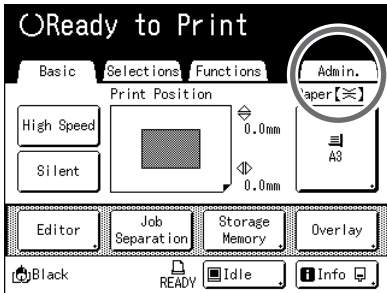


2 Touch [OK].




3 Touch [System] from the Display Access Buttons.

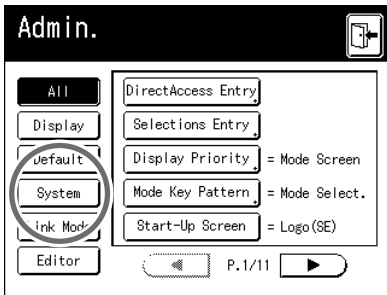


4 Touch [▶] to display [Energy Saving Mode] on the screen.

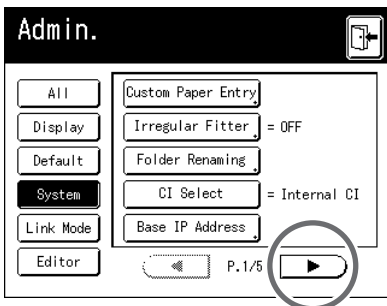



5 Touch [Energy Saving Mode].

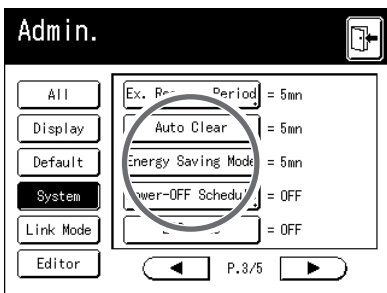 


6 Touch [Auto Power-OFF].

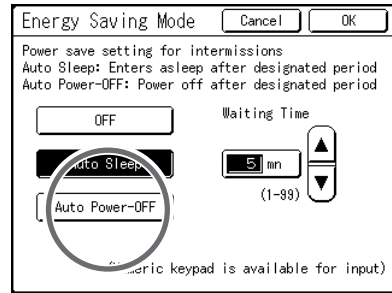 

 7 Enter "60" using the Print Quantity Keys to set the Waiting Time to "60" mn.

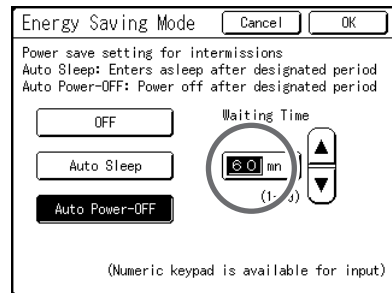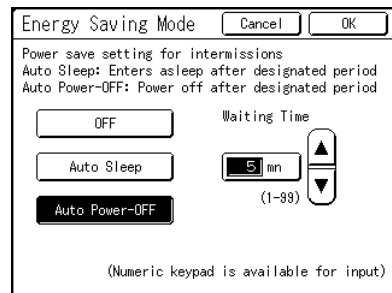

8 Touch [OK].

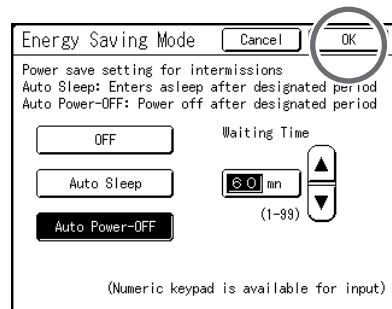 

9 Touch [▶].

